


CR-503 Ethernet Switch in 3U Eurocard Format

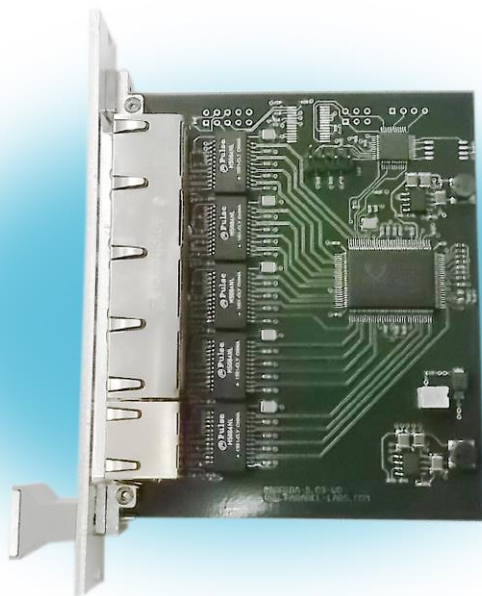


CR-503 is an Ethernet switch in the format of a 3U Eurocard (according to the mechanical standards of IEEE 1101.1 and IEEE 1101.11). The device has 5 Gigabit Ethernet ports and can be used in several modes: as an unmanaged general-purpose switch, as a switch with VLAN functions, or an Ethernet tap. The board format allows installing the device to the expansion slots of crates CompactPCI, PXI, VME, VME64 and other bus-structured modular systems complying with IEEE 1101.1 standard.

Main features

- **Form factor – 3U Eurocard, 80 mm long, IEEE 1101.1.**
- **5 ports 10/100/1000 Base-T with decoupling 1500V**
- **Full/Half duplex with flow control support IEEE 802.3x**
- **Support of jumbo frames of 9216 bytes**
- **Polarity and entangled pairs self-correction**
- **Support of IEEE 802.1Q VLAN**
- **Support of Spanning Tree IEEE 802.1w, IEEE802.1s**
- **3 modes – unmanaged switch, VLAN switch, Ethernet tap.**

Switch structure

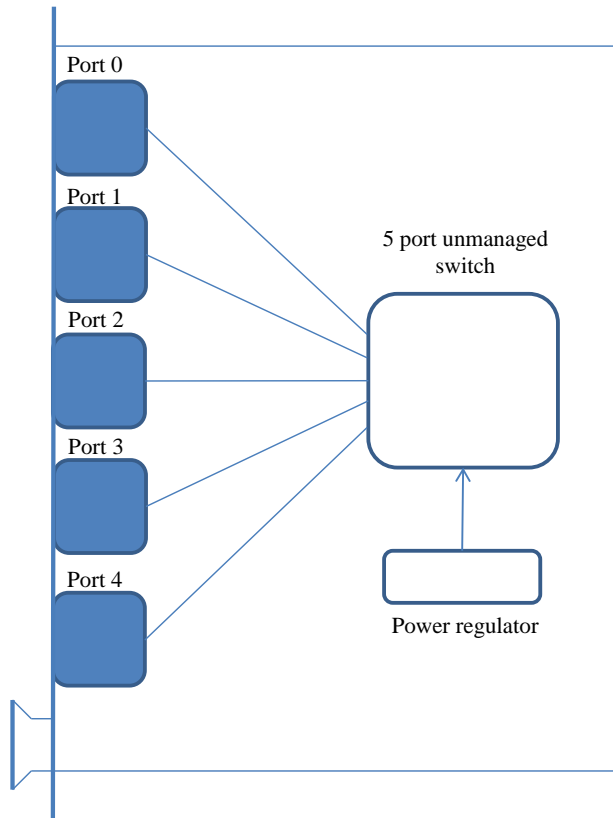

Delivery set

- **CR-503 board**
- **CD with user manual**
- **Warranty certificate**
- **Shipping box 26x17x3 cm**

Warranty obligations

Repair or replacement of the device free of charge within 2 years from the purchase

Supplier

Parabel, ltd

www.parabel-labs.com, tel./fax +7 383 213 87 07 Email: sales[AT]parabel.ru