

CR-603

7 Port SFP/PoE+ switch for outdoor applications




CR-603 is an Ethernet switch in a protected enclosure designed for operation in the industrial temperature range, with support for POE+ technology, support for SFP optical modules. The switch provides power and connects end devices to fiber optic lines at a speed of 1000 or 100 Mbps. The product provides power to external devices according to PoE 802.3at, 802.3af standards.

Key Features

- Sealed aluminum housing, protection class IP66
- Industrial temperature range from -40 to 70 ° C
- Two SFP slots for 1000base-X or 100base-FX optical modules
- Four 100/1000 base-T ports with PoE, PoE+
- One auxiliary port 100/1000 base-T
- Input power from the 220V network with possible drawdowns up to 100V
- Protection system against overheating, overload, short circuit, lightning discharges
- Web interface
- SNMP v1, v3 with authentication

Typical application scheme

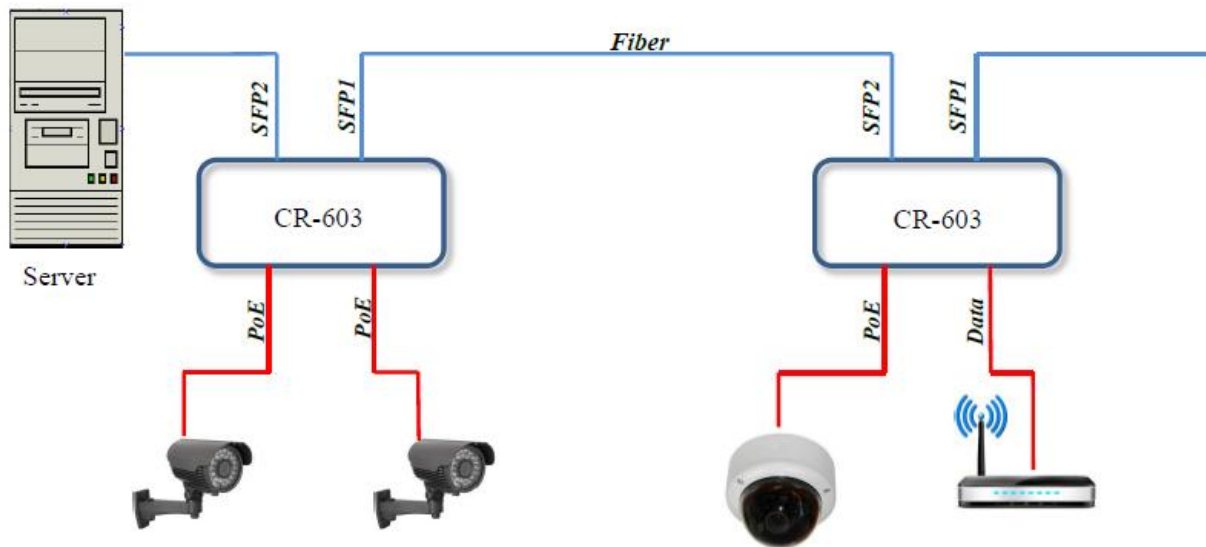

The switch allows you to connect external devices in both the point-to-point topology and the chain. Thus, coverage of an almost unlimited territory is achieved.

Contents of delivery

- Switch CR603
- Mounting bars
- Jumpers set
- User manual
- Warranty card

Warranty

Free repair or replacement of the product within 2 years from the date of purchase

Supplier

Parabel, ltd

www.parabel-labs.com,

tel./fax +7 383 213 87 07 Email: sales[AT]parabel.ru