

CR-615

7 ports 10G/GBe switch for outdoor applications




CR615 is a 7-port Ethernet switch in a rugged enclosure designed for operation in the industrial temperature range, with support for optical SFP and SFP+ modules. The switch provides connection of 5 ports according to the standards 1000 / 100base-T and 2 ports according to the standards 10Gbase-R/1000base-X.

Key Features

- **Sealed aluminum housing, protection class IP66**
- **Industrial temperature range from -40 to 70 ° C**
- **Two SFP+ slots for 10Gbase-R/1000base-X optical modules**
- **Five 100/1000 base-T ports**
- **Input power from the 220V network with possible drawdowns up to 100V**
- **Protection system against overheating, overload, short circuit, lightning discharges**
- **Web interface**
- **SNMP v1, v3 with authentication**

Typical application scheme

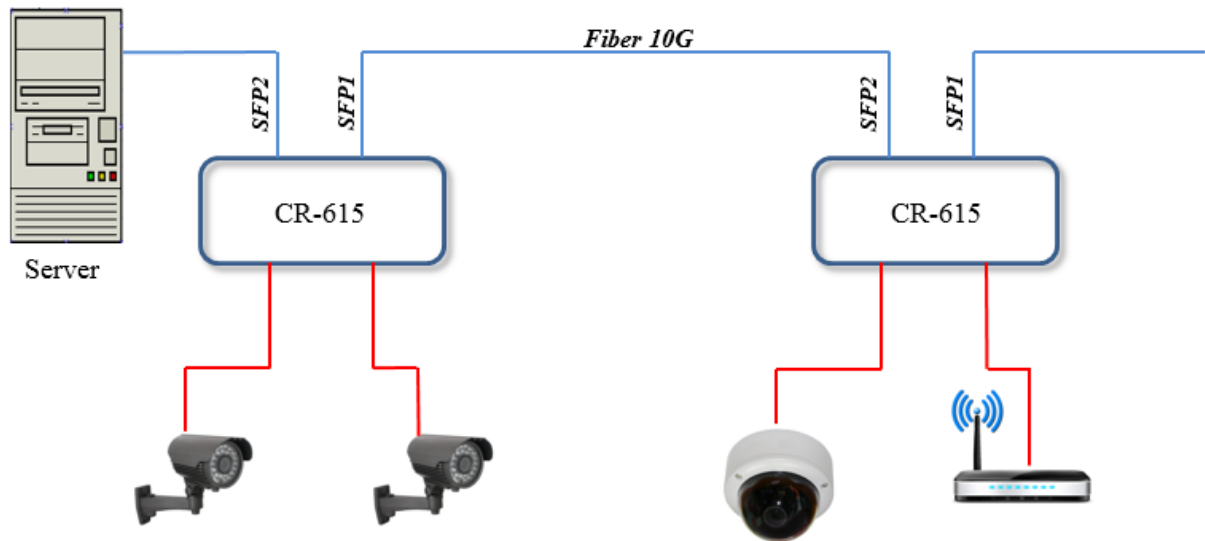

The switch allows you to connect external devices in both the point-to-point topology and the chain. Thus, coverage of an almost unlimited territory is achieved.

Contents of delivery

- Switch CR615
- Mounting bars
- Jumpers set
- User manual
- Warranty card

Warranty

Free repair or replacement of the product within 2 years from the date of purchase

Supplier

Parabel, ltd

www.parabel-labs.com,

tel./fax +7 383 213 87 07 Email: sales[AT]parabel.ru